



PIM/PIF/WEO Assembly Guide


CONNECTION

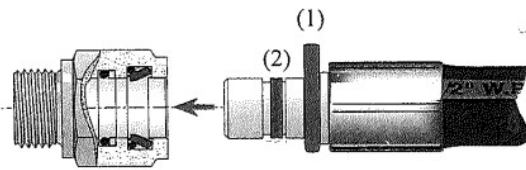

Mount the assembly stop (1) on the male part and make sure that the release ring (2) slides easily in the groove.

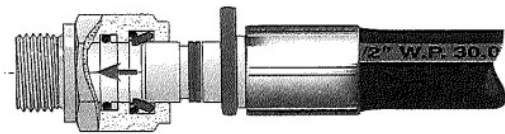


The male part is pushed into the female part until the assembly stop reaches the female part. Pull back to verify a proper connection has been made*.

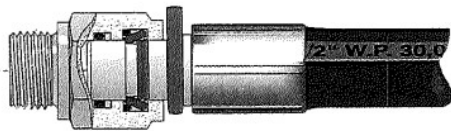


The coupling is now connected and locked.


DISCONNECTION

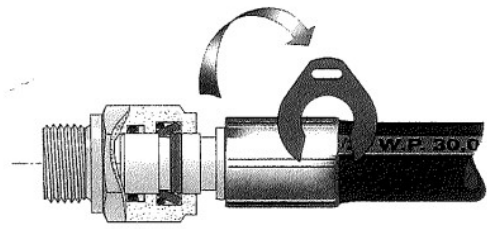

Remove the assembly stop (e.g. by using a screw driver etc.)

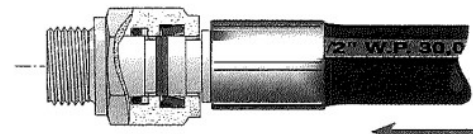

Push the male part completely into the female part.

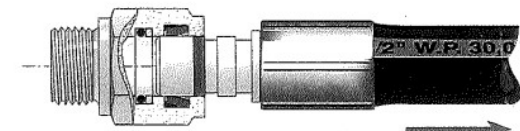

Pull the male part out of the female part. Mount the assembly stop on the male part again.

* An improper connection may result in a sudden assembly failure with a potential for personal injury.